

BT-1200

BT Portable Speaker USER GUIDE



For correctly operating, please read this manual carefully before using. Any content revise of the manual won't declare again, and we are not responsible for consequence caused by fault or oversight of this manual.

FEATURES:

1. 1.0 outdoor active Bluetooth Speaker with 10W output
2. Output very clear sound and dynamic sound effect
3. With A2DP Bluetooth, wireless stream music from any Bluetooth-enabled device such as your mobile phone, notebook, iPhone or iPad
4. Secure simple pairing for user-friendly operating
5. 10 meters operating range
6. With USB and SD card supporting;
7. With FM radio
8. With Line-in function, suitable for PC, MID, TV and other audio device.
9. Side panel control for volume
10. Built-in lithium rechargeable battery 1500mAh
11. With shoulder strap, easy to take out.

SPECIFICATION:


Horn Size: 3 inch

Horn output: 10W,4Ω

Battery Capacity: 1500mAh

Frequency Response:100Hz-20KHz

INSTRUNCTION FOR APPEARANCE AND KEY:

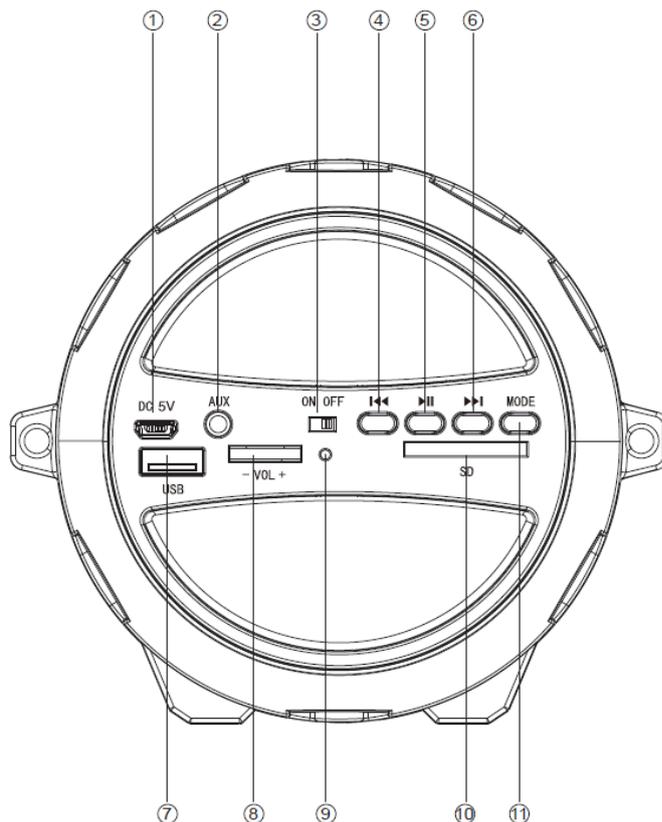

1. Charging jack

2. Aux-in jack

3. ON/OFF button

4. Backward

5. Play/Pause

6. Forward

7.USB port

8.Volume Gear

9. LED indicator

10. SD slot

11. Mode (Switch Bluetooth, USB disk, SD, FM and

AUX-IN state)

Bluetooth:

1. Turn the power button to "ON", The LED light turn blue and twinkle quickly and beep twice.

2. Activate *Bluetooth* of mobile phone and search for device name "S11B" then connect it. The blue LED light twinkle slowly and beep three times once connected successfully.

3. Play the music from your mobile phone and enjoy.

4. Press Forward or Backward button on the device or on Mobile phones to select songs you like.

5. Press Play/Pause button on the device or on Mobile phones to play/pause the music.

6. Use the "Volume Gear" to adjust volume up and down. Or adjust the mobile phones' volume.

Playing music from USB disk & SD card:

1. Turn the Power button to "ON".
2. Insert SD card or USB flash disk into slot, the music stored will be played automatically and blue LED light always keep flickering.
3. Under playing mode, short press Forward or Backward button to select songs you like, long press to fast forward or backward the song.
4. Press Play/Pause to play or pause.
5. Please turn the Power button to "OFF" while without use.

Remark: Under Bluetooth playing mode, insert SD or USB will disconnect the Bluetooth and switch to play the USB or SD card. You can press the MODE button to switch to Bluetooth mode again.

FM Radio:

1. Under FM radio state, the audio cable provided treat as antenna. Please Insert the audio cable to get the best FM signal before using.
2. Turn the power button to "ON", press the "MODE" button to FM radio state.
3. Under playing mode, short press "Play/Pause" button to auto search the FM Channel and store it automatically.
4. Press Forward or Backward button to change the stored FM channel.

AUX-IN:

For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device's "Line Out" to the "Aux In" of this device to Enjoy playing music .

Under any playing mode ,When you use the audio cable to connect the device, it will auto switch to the AUX mode.

Under AUX mode, all functions can be controlled by external device.

Remarks:

1. Press the MODE button to switch the different modes, the order is Bluetooth, USB disk, SD, FM radio and AUX-IN.
2. Turn the power button to "off" while without use.

How to charge:

1. The charger is not included in the accessories. Please use the Universal 5V/1~2A charger to charge this device, and we are not responsible for any damage caused by

using other charger.

2. Power off the unit, put the provided charge cable into the charge slot of unit, connect the other end to PC or other charger with 5V output.

3. Charge time should be 2-4 hours. The light is red while charging, and the indicator light will switch off when full charged.

(When playing music during charging, please put the volume to middle, because for some music with heavy bass, the charger may not be able to afford the high current temporarily under the maximum volume.)

4. In order to prolong the life of battery, please do not charge more than 8 hours.